



Diagram of the installation procedure



start

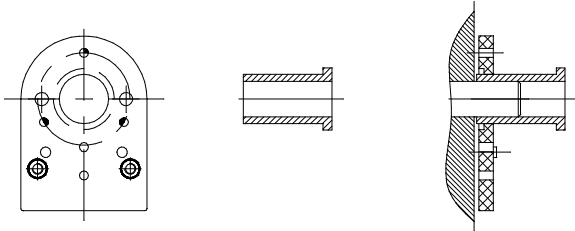


1. Fixed position concentricity(Motor shaft, Allocation barrel, Allocation mould)

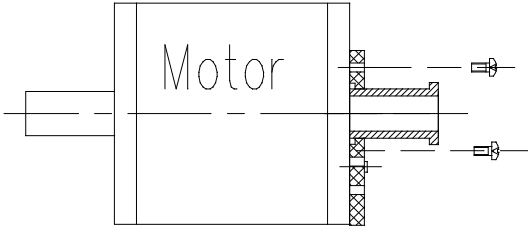


2. Fix the allocation mould with screw

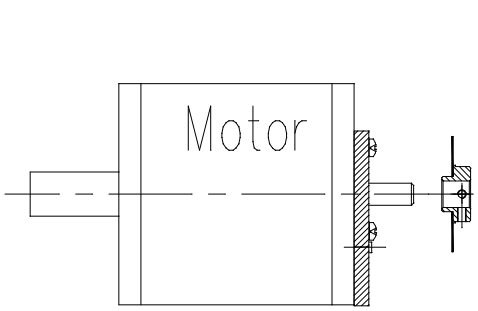



3. Install the code-wheel

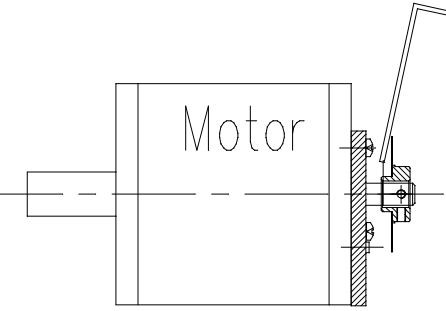


4. Fix the code-wheel with screw (not too tight)

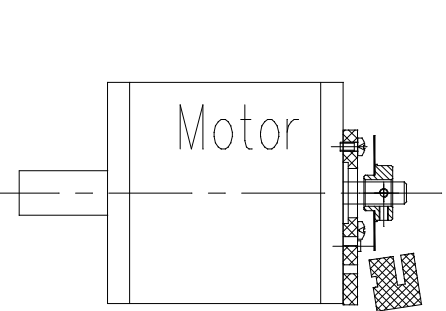



5. Install the encoder module

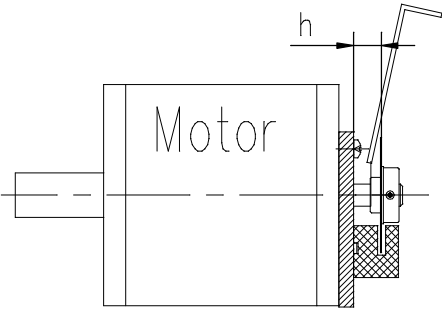


6. Fix the code-wheel(check the code-wheel in the middle of the clearance)

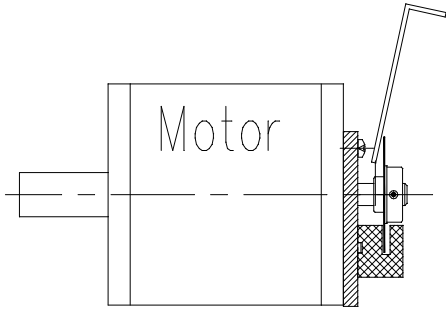

7. Fix the code-wheel(screw down)

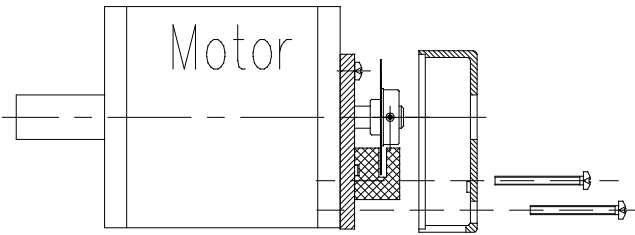

8. Install the housing

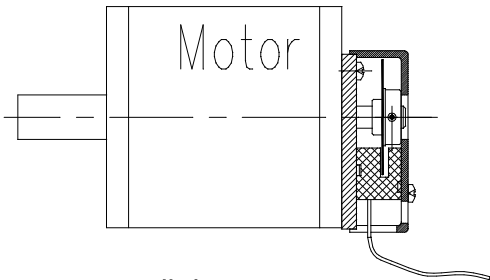

9. Install the connector

